



Air for life

Installation Regulations

Wireless RH sensor with boost function

English



Installation regulations

Wireless RH sensor with boost function



Keep this document near the unit

This unit may be used by children as of 8 years of age, persons with reduced physical, sensory or mental capacities, and persons with limited knowledge and experience if they are supervised or have received instructions on how to use the unit safely and are aware of the possible dangers. Children under 3 years of age must be kept away from the unit unless under continuous supervision. Children between the ages of 3 and 8 may switch the unit on or off, but only if supervised or if they have received clear instructions on the safe use of the unit and understand the possible dangers, on the condition that the unit has been placed and installed in the normal position for use. Children under 8 years of age may not insert the plug into the socket, nor clean or make changes to the settings of the unit, nor carry out any maintenance on the unit that would normally be carried out by the user. Children may not play with the unit.

Always order a replacement power cable from Brink Climate Systems B.V., if the power cable is replaced. To prevent dangerous situations, a damaged mains connection must only be replaced by a qualified expert!

Country: GB

Contents

1 About this document	5
1.1 Copyright	5
1.2 Warnings	6
2 Safety	7
2.1 Intended use	7
2.2 Unintended Use	7
3 Delivery content	8
4 Technical specification	9
4.1 General product specification	9
5 Operation	10
5.1 Types of remote controllers/sensors	10
5.2 Environmental factors affecting range and performance	11
5.3 {Option} Signal Amplifier	12
6 Assembly	13
6.1 Installing Wireless RH sensor with boost function	13
6.2 Remove Wireless RH sensor with boost function	13
6.3 Replace battery	14
6.4 Maintenance	14
6.5 {Option} Connecting permanent power supply	15
6.6 {Option} Using another frame	16
7 Commissioning	17
7.1 Pairing with USB transceiver	17
7.2 Pairing multiple systems	18
7.3 Factory reset Wireless RH sensor with boost function	19
7.4 Factory reset USB transceiver	19
7.5 Operating the Wireless RH sensor with boost function	20
7.6 Overview operational controls	20
8 Settings	22
8.1 RH-sensor general	22
8.2 Settings RH-sensor	22
9 Troubleshooting and warranty	23
9.1 Failure	23
9.2 System validation	23
9.3 Warranty	23
10 Declaration of Conformity	24
11 Recycling and Disposal	25

1 About this document

Dear client,

Thank you for purchasing the Wireless RH sensor with boost function.

This user and installation manual provides all the information required to safely install, operate, and maintain the accessory.

Please read this manual carefully before installing or using the accessory to ensure correct and safe operation.

This manual is intended for both the installer and the end user. Certain chapters and instructions are intended exclusively for qualified installers, as they describe technical procedures and safety measures that require specialist expertise.

Keep this manual for future reference.

For additional information, feedback or suggestions, please contact:

Brink Climate Systems B.V.

PO Box 11 - NL-7950 AA, Staphorst, The Netherlands

Phone: +31 (0) 522 46 99 44

Email: info@brinkclimatesystems.nl

Website: www.brinkclimatesystems.nl

1.1 Copyright

All information, illustrations, data, and materials in this document are the property of Brink Climate Systems B.V. and are provided in confidence. Reproduction or distribution is not permitted without prior written consent.

1.2 Warnings

Warnings alert the user to possible risks before an instruction begins.

The warnings provide you with information on the possible severity of the risk using a pictogram and a keyword.



Danger

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Electrical danger

Indicates a hazardous electrical situation which, if not avoided, will result in death or serious injury.



Warning

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Caution

Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Note

Indicates information to prevent damage to property.

Warnings are structured as follows:



Warning

Possible signal words: Danger / Electrical danger / Warning / Caution / Note

Type and source of risk.

Explanation of risk

1. Action to prevent the risk

2 Safety

2.1 Intended use

This manual is about the accessory Wireless RH sensor with boost function.

The accessory is intended for use in a domestic environment only. And should only be used in combination with products approved by Brink Climate Systems B.V..



Note

Please note: For installations with a Signal Amplifier version 2.0, the components and USB transceiver must have firmware version S2.0 or higher.

This is because the USB transceiver and the Signal Amplifier use different pairing protocols in their S1 and S2 firmware branches. The firmware version can be found on the sticker located on the side of the wireless device.



Using the accessory for other purposes is only permitted after consultation with the national representation of Brink Climate Systems B.V. and requires commissioning by Brink Climate Systems B.V.'s service department. Please contact the local installer and the national representation of Brink Climate Systems B.V. for this purpose.

The accessory can only be used with a Heat recovery ventilation (HRV) equipped with a USB connection and where the various components are equipped with specific software versions:

- HRV unit software version starting with S2 → Version S2.01.24 or higher.
- HRV unit software version starting with S3 → Version S3.01.03 or higher.

For correct operation, the Wireless RH sensor with boost function must be installed in an indoor environment with suitable ambient conditions.

- Only to be used in enclosed and frost-proof areas.
- The ambient temperature and relative humidity must be within the limits provided in the technical specifications.



Note

+2 °C to +40 °C, RH < 90 % (non-condensing)

- Do not install the Wireless RH sensor with boost function near heat sources, radiators, or in areas with extreme humidity.
- Avoid exposure to direct radiant heat, such as sunlight.
- Do not place the Wireless RH sensor with boost function near strong magnetic fields, as these may damage internal components.

2.2 Unintended Use

Do not use the unit in the following environments:

- Explosive or potentially explosive atmospheres
- Highly corrosive (e.g., chlorine, ammonia) or polluted atmospheres (e.g., with metal-containing dust)
- Locations above 2000 m altitude


Any use other than the intended use is not permitted. Any modification to the product, at any time, including during installation, voids all warranty claims.

The user assumes full responsibility for any such use.

3 Delivery content

Verify that the delivered Wireless RH sensor with boost function is complete and free of damage.

The delivery content of the Wireless RH sensor with boost function consists of the following components:

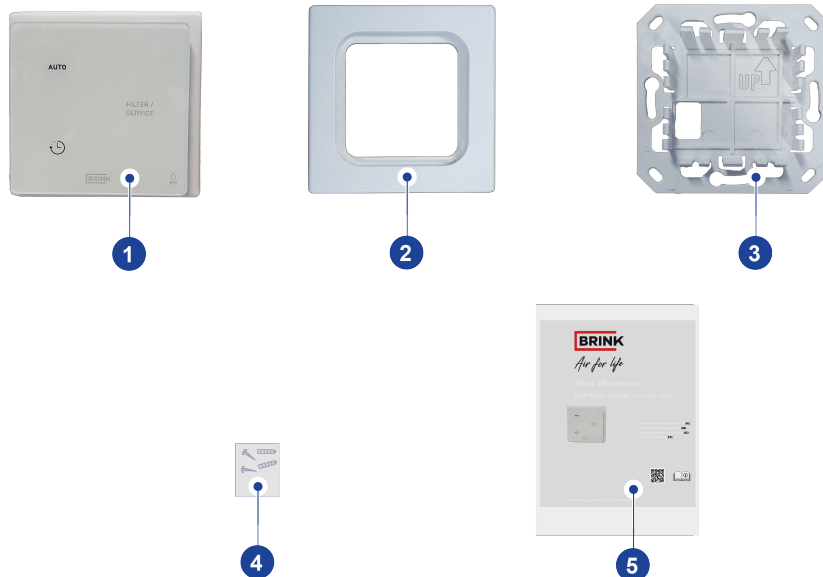

1. Wireless RH sensor with boost function
2. Frame
3. Wall bracket
4. Mounting screws (2x) and wall plugs (2x)
5. Short information with QR-code to online manual

The delivery content does not include the optionally available permanent power supply which can be ordered from Brink under part number 532924.

4 Technical specification

4.1 General product specification

Product description

Name: Wireless RH sensor with boost function

Technical product specifications

Operating voltage: 3 VDC **(Optional 230 VAC mains supply)*

Protection class: IP21

Type of battery : CR2032.MRF Lithium **(preferred manufacturer Renata or Panasonic CR-2032/BS)*

Not applicable if a permanent power supply is used!

Battery performance: **Battery performance will drastically deteriorate when no or bad connection to the USB transceiver in the HRV unit can be made!**
For example out-of-range or removed from the USB slot. Please remove the battery when storing the sensor/controller.

Frequency: 868 MHz

Color: RAL 9010 **(White)*

Ambient conditions

Ambient temperature: +2°C to +40°C

Storage temperature: -20°C to 60°C

Humidity: <90%

Other: For indoor use only

Range: 300 m **(open field; 1 meter height)*

5 Operation

5.1 Types of remote controllers/sensors


Brink Climate Systems B.V. offers a series of five types of remote controllers and sensors (A-E) that connect wirelessly to a Heat Recovery Ventilation unit via a USB-transceiver (F).

Remote controllers (types A, B, and C) indicates when the filter(s) need to be cleaned, replaced, or when a malfunction occurs in the ventilation system.

Multiple remote controllers and/or sensors can be paired with a single USB transceiver.

A maximum of 12 devices can be connected per USB transceiver, consisting of up to 4 remote controllers, 4 CO₂ sensors and 4 humidity sensors

If wireless range limitations occur, a maximum of one Signal Amplifier (H) can be added to extend coverage.

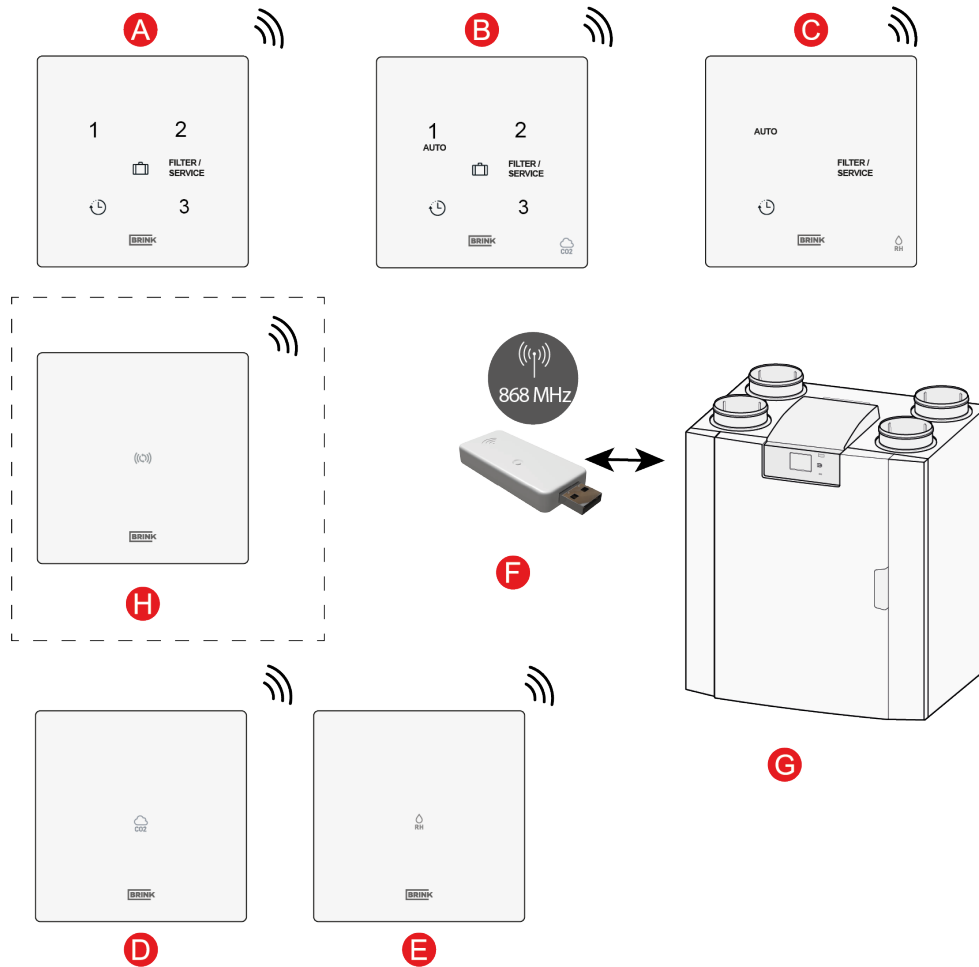

Device Types

- A. Wireless 3-position switch
- B. Wireless CO₂ sensor with 3-position switch
- C. Wireless RH sensor with boost function
- D. Wireless CO₂ sensor
- E. Wireless RH sensor
- F. USB Transceiver
- G. HRV unit with USB connection (e.g., HRV unit type flair)
- H. Signal Amplifier

Order information, article code:

- 532711
- 532727
- 532728
- 532712
- 532713
- 532714 *(Mandatory accessory)
- ---
- 532715 *(Optional)

5.2 Environmental factors affecting range and performance

Devices operating in the 868 MHz UHF band are sensitive to environmental conditions. The communication range can be significantly reduced by the physical characteristics of residential buildings.

(Exterior) Walls, floors, and ceilings constructed from reinforced concrete, brick, or containing metal elements (e.g., steel frames, pipes, insulation foil) introduce signal attenuation. Each additional wall or floor further decreases the effective range.

In apartment buildings, dense structural materials, multiple adjacent walls, and interference from other wireless devices operating in the same frequency band can further limit signal propagation.

Range is also influenced by device mounting position and its proximity to large metal objects or electrical installations.

Conditions under which performance is likely guaranteed

- Communication through one interior wall or floor
- Devices installed in open, elevated positions
- No other wireless devices operating in the same 868 MHz band nearby
- Short distance between devices
- Devices not placed near metal surfaces
- Devices mounted away from electrical panels or wiring channels

Conditions under which performance may be reduced

- Communication through multiple interior walls or floors
- Communication over large distances
- Nearby devices operating in the 868 MHz UHF band
- Devices located close to large metal objects (units, cabinets, metal doors, metal pipes)
- Devices positioned near electrical installations (distribution boards, wiring conduits)
- Devices placed behind or surrounded by reinforced concrete
- Devices located inside enclosed spaces (closets, cabinets, sealed housings)
- Use in apartments with dense structural materials (brick, concrete, metal-reinforced walls)
- Interference from neighboring apartments with similar wireless devices

Conditions Under Which Performance Cannot Be Guaranteed

- Communication through exterior walls (brick, concrete, insulation foil, steel frames)
- Devices installed (on / in) separat (floors / rooms) without a Signal Amplifier
- Communication paths that pass through multiple exterior barriers
- Large numbers of wireless devices in the same frequency band causing congestion
- Sensor and USB transceiver located in opposite ends of a building with many obstructions
- Presence of continuous metal barriers between devices (e.g., HVAC ducts, lift shafts)

Recommendation: For optimal performance, install devices in elevated, open locations and away from metal surfaces. Actual performance may vary depending on environmental conditions and installation quality.

If wireless range limitations occur, a maximum of one Signal Amplifier can be added to extend coverage.

5.3 {Option} Signal Amplifier

An optional Signal Amplifier is available to extend the communication range between the USB transceiver (F) and the wireless remote controllers/sensors (A–E).



Note

A maximum of one Signal Amplifier is permitted within a single system network architecture to ensure proper signal integrity and system performance.

The Signal Amplifier is required when:

- the signal must cover a long distance within the dwelling,
- the home is highly insulated, or
- materials that interfere with wireless communication are present.

During system design, ensure that space and provisions are made for installing this Signal Amplifier.

Ordering Information

The Signal Amplifier can be ordered via Brink under article code 532715.

6 Assembly

6.1 Installing Wireless RH sensor with boost function

Perform **step1** to **step 3** to install the Wireless RH sensor with boost function.

Step 1

The wall bracket can be attached to a flush mounted electrical box (Ø 55 mm) or can be directly mounted on the wall with supplied double sided adhesive tape. Mounting on a electrical box is necessary when a permanent power supply (option) is used. (see → [{Option} Connecting permanent power supply](#) ► 15)


The Wireless RH sensor with boost function should be placed at a height of approximately 1,65 meters above the floor.

- Screw or glue the wall bracket onto the wall in the correct position.



Note

The arrow on the wall bracket must point upwards!

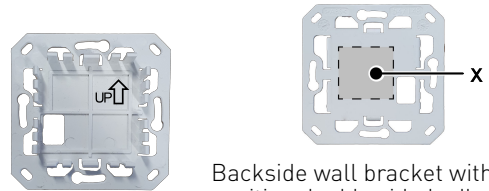

Backside wall bracket with position double sided adhesive tape

Step 2

Remove the plastic isolation strip from the battery.



Note

Once the wireless remote controller/sensor receives power, all 5 LEDs on the controller/sensor will start flashing.




Step 3

Click the Wireless RH sensor with boost function (A) together with supplied frame (B) on the wall bracket (C).

**(An example of a wireless 3-position switch is shown, other wireless accessories are installed in the same way.)*


After mounting the Wireless RH sensor with boost function on the wall bracket, remove the foil from the front.

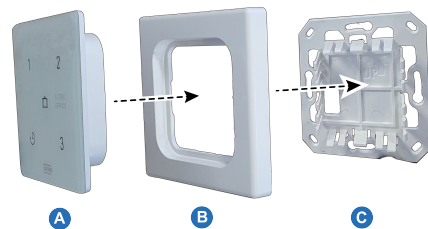

6.2 Remove Wireless RH sensor with boost function

To remove the Wireless RH sensor with boost function from the wall bracket, grasp the front of the Wireless RH sensor with boost function by its edges and gently pull it away from the bracket.

**(Example: "Wireless 3-position switch", other wireless controllers and sensors can be removed from the wall bracket in the same manner.)*

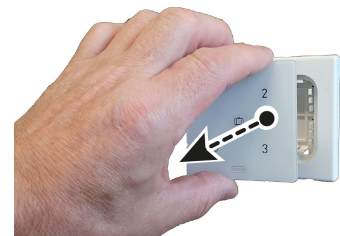

6.3 Replace battery

Replace battery Wireless RH sensor with boost function


(Not applicable when using the optional permanent power supply.)

For replacing battery take Wireless RH sensor with boost function from the wall bracket, see → [Remove Wireless RH sensor with boost function](#) ► 13 .

Replace battery with correct type CR2032.

MRF battery manufacturer Renata (or Panasonic CR-2032/BS).

Pay attention to the position of the battery! The text marked "+" must always be legible after inserting the battery.

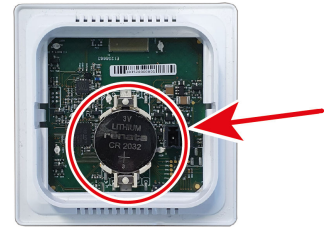

Back side of the
Wireless RH sensor with boost
function



Note

Replace the battery at least once every 2 years to prevent malfunctions.

6.4 Maintenance

Clean the Wireless RH sensor with boost function regularly with a soft cloth.



Note

Never apply water and/or (cleaning) liquid to the Wireless RH sensor with boost function.

6.5 {Option} Connecting permanent power supply

The optional permanent power supply can be ordered from Brink under article code 532924.

Perform **step 1** to **step 4** to install the Wireless RH sensor with boost function with permanent power supply.



Electrical danger


At all times disconnect the 230 V. mains supply when connecting a permanent power supply.

Step 1

- Fit the permanent power supply (A) in the wall box.
- Connect the 230 V mains supply to the factory-mounted grey connectors of the power supply. Strip the wire to a length of approximately 7 mm.

Step 2

- Feed the red and black wires with the green connector through the square hole in the in the wall bracket (C).
- Install the Wireless RH sensor with boost function in a Ø55 mm flush-mounted wall box at a height of about 1.65 m.
- Screw the wall bracket on the wall box.

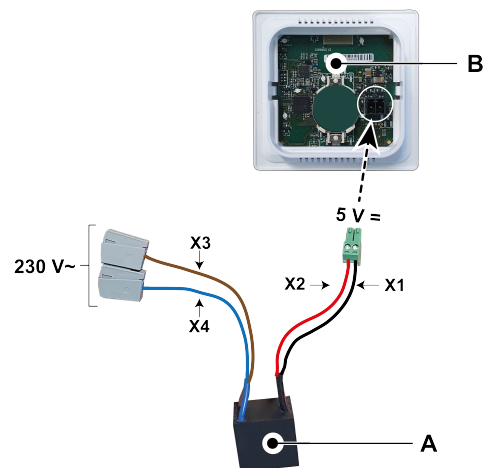

A. Permanent power supply
*(230 VAC/5 VDC)

B. Wireless RH sensor with
boost function

X1 = Black
X2 = Red
X3 = Brown
X4 = Blue

Step 3




Note

The arrow on the wall bracket must point upwards!

- Removal of the battery (if mounted) is not required but recommended.
- Feed the red and black wire with the green connector through the frame (B), and connect this to the connector on the back side of the Wireless RH sensor with boost function (A).
- Click the Wireless RH sensor with boost function (A) together with connected red and black wires and the frame (B) on the wall bracket (C).

*(An example of a wireless 3-position switch is shown, other wireless accessories are installed in the same way.)

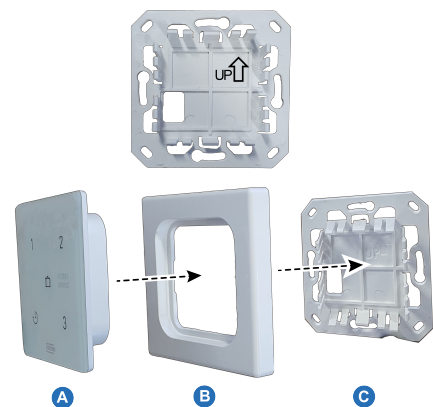

Step 4

- After mounting the Wireless RH sensor with boost function on the wall bracket, remove the foil from the front.
- Reconnect the 230 V mains supply.




Note

Once the wireless remote controller/sensor receives power, all 5 LEDs on the controller/sensor will start flashing.




6.6 {Option} Using another frame

The Wireless RH sensor with boost function consists of a wall bracket (C), a frame (B) and the wireless accessory (A). The wall bracket (C) is designed in such a way that a large number of frames from other vendors can be used.

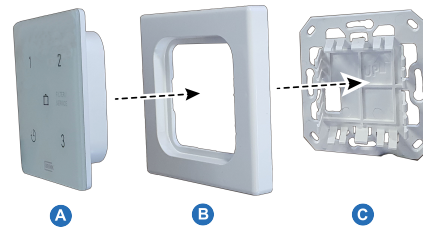

Products are supplied with Brink frame as standard. This frame can be replaced by frames from the other manufacturers and series. Appearance and tolerances vary by manufacturer. The following types of frames can be used instead of the standard frame:

- A. Gira - System 55
- B. Busch Jaeger Balance/Reflex SI
- C. Jung AS
- D. Siemens Delta
- E. Berker S.1
- F. Merten System M

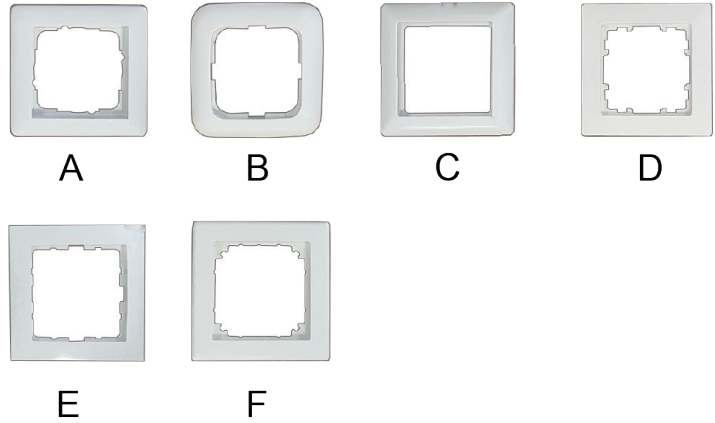

The above mentioned alternative frames are not included in the Brink delivery program!

7 Commissioning

7.1 Pairing with USB transceiver

Step 1 USB transceiver

When the Wireless RH sensor with boost function has been installed on the wall, the USB transceiver can be placed in the USB port of the HRV unit that needs to be connected with the Wireless RH sensor with boost function.



Note

The USB transceiver is not supplied with the Wireless RH sensor with boost function and can be ordered separately from Brink (article code 532714)




Step 2 HRV unit

Apply mains power to the HRV unit.

For an HRV unit equipped with a display, the USB symbol () will appear as confirmation that the USB transceiver has been recognized. For an HRV unit without a display, this USB symbol will be visible in the app.

If the USB symbol does not appear, the HRV unit is likely running a software version from before July 2022, in which case pairing with the Wireless RH sensor with boost function is not supported.

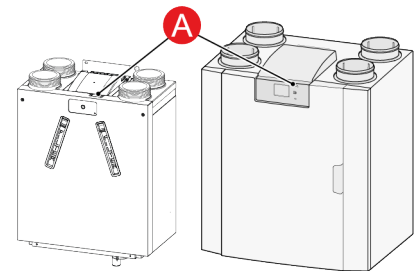


A. USB Port on HRV unit
**(e.g., HRV units type EASE 200 & Flair)*

Step 3 USB transceiver

Press and hold the pairing button on the USB transceiver for 5 seconds.

The green LED on the USB transceiver will start flashing (once per second), indicating that pairing mode is active.

Pairing mode will remain active for 10 minutes.

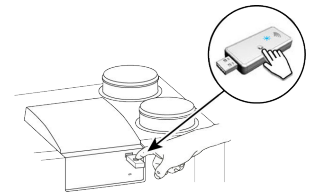

Step 4 Wireless RH sensor with boost function

Press and hold the pairing button on the bottom of the Wireless RH sensor with boost function for 5 seconds.


The button is accessible through a small hole and can be pressed using, for example, the end of a paper clip.

A noticeable *click* should be felt when the button is pressed.

After 5 seconds, release the button to enable pairing mode.

Pairing mode is active when the four LED lights illuminate in sequence

**(each LED turns on for 0.5 seconds, with the next LED lighting up only after the previous one turns off).*

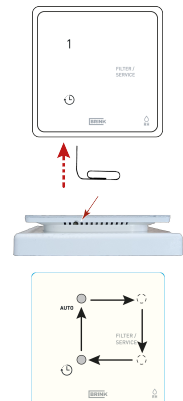

Step 5 Wireless RH sensor with boost function

A combination of multiple remote controller(s)/sensor(s) on one USB transceiver is possible.



Note

A remote controller with a built-in CO₂-sensor is seen by the connected HRV unit as a CO₂-sensor and a controller with a built-in humidity sensor is seen as a humidity sensor(RH).

When pairing multiple wireless controllers/sensors with the HRV unit, press a button for NODE ID that has not been paired yet. This ID must be unique for each sensor of the same type. The button number corresponds to the number of the paired accessory in the HRV unit menu.




Note

If a wireless remote controller/sensor is registered with an existing NODE ID, the first registered remote controller/sensor will be overwritten. Please ensure that all paired remote controllers/sensors have their own unique NODE ID.

Choose under which number the Wireless RH sensor with boost function should be registered by configuring a "NODE ID"; press any of the four (non visible) buttons on the accessory.

For example press button 2; LED 2 will flash once.

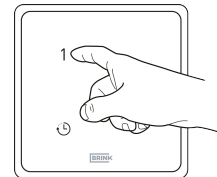

Step 6 USB transceiver

Stop the pairing mode:


Press and hold for 1 second the pairing button of the USB transceiver.

The green LED on the USB transceiver will stop flashing.




Note

Always deactivate the pairing mode on the USB transceiver immediately after pairing.

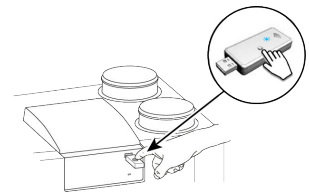

Fail

Pairing mode failed when the red LED is ON for two seconds and the unpaired sequence will be shown again. Try to pair Wireless RH sensor with boost function again. (Or see → [{Option} Signal Amplifier](#) ► 12)

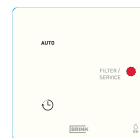

7.2 Pairing multiple systems

When pairing multiple installations/residences, be sure to complete the pairing of the wireless transmitters per installation/residence, and ensure that only one (1) USB transceiver is in pairing mode at a time.

It is possible for a USB transceiver in pairing mode to detect and pair with USB transceiver(s), wireless controller(s), Installing signal amplifier(s) and/or sensor(s) from different installations/residences.

To stop the pairing mode on a USB transceiver: Press the pairing button on the USB transceiver for 1 second. The Green LED on the device will stop flashing.



Note


Always deactivate the pairing mode on the USB transceiver immediately after pairing.

7.3 Factory reset Wireless RH sensor with boost function

It is possible to reset the USB transceiver and remote controller(s)/sensor(s) back to factory settings:

Factory resetting Wireless RH sensor with boost function

- Press and hold the pairing button (for example with end of a paperclip) for more than 20 seconds. When pressing the button a "click" should be noticeable.
- Release the button after 20 seconds.
- To confirm the reset all 5 LED's will flash two times (0,5 second on and 5 seconds off).
- All the pairing information has been deleted from the Wireless RH sensor with boost function.

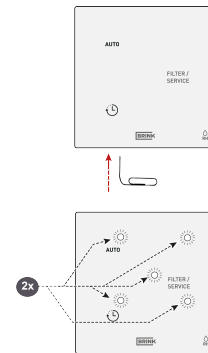

7.4 Factory reset USB transceiver

- Press and hold the button on the USB transceiver for more than 20 seconds.
- To confirm the reset, the green LED on the USB transceiver will flash two times.
- All the pairing information has been deleted from the USB transceiver.

All connected devices must be re-paired individually, if applicable.



7.5 Operating the Wireless RH sensor with boost function

The connected HRV unit is operated by pressing one of the buttons on the accessory Wireless RH sensor with boost function. For explanation of the buttons see (→ [Overview operational controls](#) ► 20).



Note

Note: For a battery-powered accessory, the LEDs turn off automatically after 300 seconds to save battery power. After touching any button, the LEDs turn on again.

When one or more CO₂ sensors are paired with the HRV unit, the unit automatically regulates the ventilation level according to the CO₂ threshold settings configured in the HRV.

If multiple CO₂ sensors are connected, the ventilation demand is determined by the sensor requesting the highest ventilation level.

When multiple remote controllers are in use, the ventilation level most recently selected on any controller overrides all previously set levels.

When the vacation mode () is activated (if available), the humidity control/CO₂ control (if applicable) is not operational! The CO₂ control is also not operational in setting 3 of a 3-position switch and in boost mode on a RH sensor with boost function.

The activation of the remote controller/sensor and the airflow rates associated with the ventilation settings must always be set on the paired HRV unit. This cannot be done on the Wireless RH sensor with boost function.


Refer to the installation manual of the connected HRV unit for further instructions.

7.6 Overview operational controls

The Wireless RH sensor with boost function has four capacitive buttons, each with a white LED that flashes once to confirm a button press.

Two of the buttons are hidden but can be used for node ID assignment during pairing.

Button overview

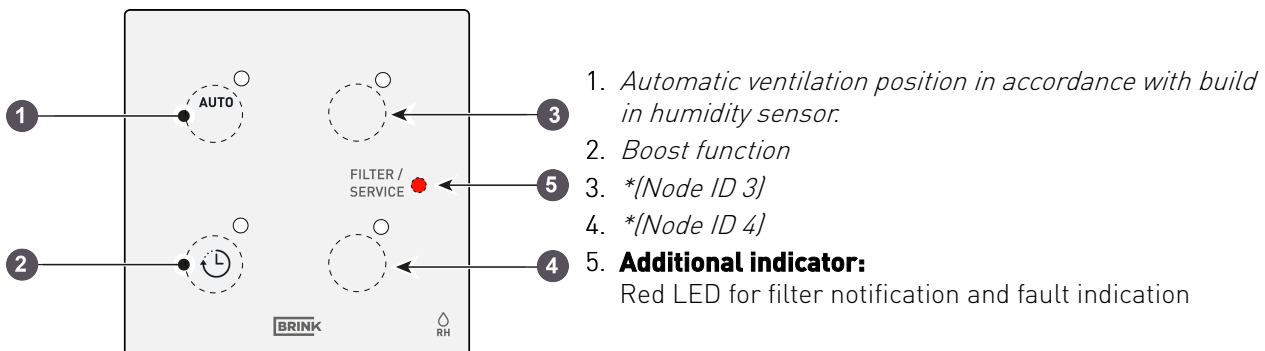

Button 1 - Auto / Ventilation level 1

When button 1 is pressed, the HRV unit switches to ventilation level 1 (*basic ventilation during absence*)

or to automatic mode according to the connected humidity sensor(s).



Button 2 - Boost function ()


Pressing button 2 activates the boost function

(*the HRV unit runs at ventilation level 3 for 30 minutes and then automatically returns to the previous ventilation setting*).



Button 3 & 4

Press hidden button 3 or 4 to assign node ID 3 or 4. (see → [Pairing with USB transceiver](#) ► 17)

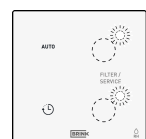


Filter / Fault LED (red)

Filter notification

The filter(s) of the connected HRV unit must be cleaned or replaced when the red LED on the Wireless RH sensor with boost function lights up. The LED remains continuously lit.

The filter notification cannot be reset via the Wireless RH sensor with boost function. Refer to the manual of the connected HRV unit for instructions on resetting the filter alert.

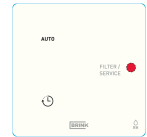

Fault notification

If the connected HRV unit reports a malfunction, the red LED on the Wireless RH sensor with boost function flashes at a frequency of 1 Hz (1 blink per second).


Refer to the installation manual of the connected HRV unit for troubleshooting details.



Lost connection

If the Wireless RH sensor with boost function loses connection with the USB transceiver, the red LED on the Wireless RH sensor with boost function flashes 3 × 0.5 seconds ON, followed by 60 seconds OFF

During this condition, filter and fault notifications are overridden.

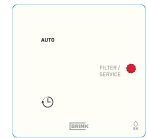

8 Settings

8.1 RH-sensor general

The Wireless RH sensor with boost function ensures optimum ventilation in the dwelling by automatically adjusting the airflow rate on the basis of the humidity content. The airflow rate is determined by the humidity sensor that requests the highest level.

Depending on the sensitivity of the humidity sensor, the Wireless RH sensor with boost function adjusts the air flow proportionally between the setting 1 (set low) and setting 3 (set high). The settings made in the menu of the connected HRV unit applies to all connected humidity sensors.


8.2 Settings RH-sensor

After installation the RH sensor(s) must be activated in the settings menu step number 7.1 to ON. Optionally, the sensitivity of the sensor can be altered by means of step number 7.2. Process for adjusting the value [s] in the settings menu of the Flair unit, see the installation instructions.

Step no.	Description	Factory setting	Adjusting range
7.1	RH-sensor	OFF	OFF = RH-sensor not active ON = RH-sensor active
7.2	Sensitivity	0	+2 = most sensitive 0 = default setting -2 = least sensitive

Check the operation of RH sensor

Select  on the touchscreen of the HRV unit and go with  and  to readout value RH sensor. For units without a touchscreen, use the Brink app.

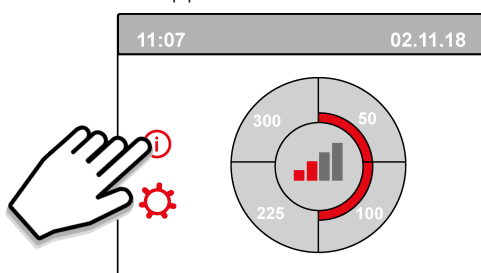

9 Troubleshooting and warranty

9.1 Failure

- When using battery-powered remote controls/sensors, the HRV unit will go into a fault state when the battery is low; the fault will disappear after replacing the battery.
- Check if the HRV unit is in vacation mode if wireless CO2 or RH sensors are not functioning.
- In case of pairing issues, refer to → [Pairing with USB transceiver](#) ► 17
- Refer to the installation manual of the connected HRV unit for other errors

9.2 System validation

It is possible to check which wireless switches and sensors are paired with the USB transceiver. This also allows you to determine under which Node ID the module is registered.

- Press and hold the button of the USB transceiver for 12 seconds.
- A LED on the connected devices will display a pattern of 2 seconds on and 5 seconds off.
If this pattern is not visible, press a button on the device to wake it up.
If the pattern still does not appear, the device is either out of range or not paired with the USB transceiver.
- The LED indicates the devices number.
- Press the button again for 12 seconds to exit the system validation mode.
- Switching the 230V power off and on will also end the mode.



9.3 Warranty

The Wireless RH sensor with boost function has been carefully manufactured by Brink Climate Systems B.V. and meets high-quality standards. The functionality of the Wireless RH sensor with boost function is guaranteed for a period of two years from the moment of delivery. This warranty is provided in accordance with Brink Climate Systems B.V.'s General Terms and Conditions, which you can find on www.brinkclimatesystems.nl.

In case of incorrect or improper use of the Wireless RH sensor with boost function and failure to follow the instructions in this user manual, your right to warranty is void.

If you wish to claim warranty:

You must make this known in writing via:

Brink Climate Systems B.V.

PO Box 11 - NL-7950 AA, Staphorst, The Netherlands

Phone: +31 (0) 522 46 99 44

Email: info@brinkclimatesystems.nl

Website: www.brinkclimatesystems.nl



Note

It is not allowed to make any changes to the hardware or software of the Wireless RH sensor with boost function. This can affect the proper functioning of the Wireless RH sensor with boost function, and in that case, all warranties will be void."

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Wireless RH sensor with boost function 616880-H

11 Recycling and Disposal



Do not dispose of the unit as household waste!

In accordance with the Waste Disposal Act, the following components must be disposed of or recycled in an environmentally compatible manner by means of appropriate collection points:

- Old unit
- Wear parts
- Defective components
- Electrical or electronic waste
- Environmentally hazardous liquids and oils

Separate materials by type to ensure environmentally compatible disposal and maximise the recyclability of the base materials while minimising environmental impact.

1. Dispose of packaging made of cardboard, recyclable plastics and synthetic filler materials in an environmentally compatible manner through appropriate recycling systems or a recycling center.
2. Please observe the applicable national and local regulations.



Brink Climate Systems B.V.

Wethouder Wassebaliestraat 8, NL-7951SN Staphorst

Tel.: +31 (0) 522 46 99 44

E: info@brinkclimatesystems.nl

www.brinkclimatesystems.nl